

### Aalborg Universitet

### Particle Image Velocimetry

User Guide Zhang, Chen; Vasilevskis, Sandijs; Kozlowski, Bartosz

Publication date: 2018

**Document Version** Publisher's PDF, also known as Version of record

Link to publication from Aalborg University

Citation for published version (APA):

Zhang, C., Vasilevskis, S., & Kozlowski, B. (2018). *Particle Image Velocimetry: User Guide*. Department of Civil Engineering, Aalborg University. DCE Technical reports No. 237

#### General rights

Copyright and moral rights for the publications made accessible in the public portal are retained by the authors and/or other copyright owners and it is a condition of accessing publications that users recognise and abide by the legal requirements associated with these rights.

- Users may download and print one copy of any publication from the public portal for the purpose of private study or research.
- You may not further distribute the material or use it for any profit-making activity or commercial gain
   You may freely distribute the URL identifying the publication in the public portal -

#### Take down policy

If you believe that this document breaches copyright please contact us at vbn@aub.aau.dk providing details, and we will remove access to the work immediately and investigate your claim.



# Particle Image Velocimetry - User Guide

Chen Zhang Sandijs Vasilevskis Bartosz Kozlowski

ISSN 1901-726X DCE Technical Report No. 237

Aalborg University Department of Civil Engineering Group Name

**DCE Technical Report No. 237** 

## Particle Image Velocimetry - User guide

by

Chen Zhang Sandijs Vasilevskis Bartosz Kozlowski

Jan 2018

© Aalborg University

### Scientific Publications at the Department of Civil Engineering

**Technical Reports** are published for timely dissemination of research results and scientific work carried out at the Department of Civil Engineering (DCE) at Aalborg University. This medium allows publication of more detailed explanations and results than typically allowed in scientific journals.

**Technical Memoranda** are produced to enable the preliminary dissemination of scientific work by the personnel of the DCE where such release is deemed to be appropriate. Documents of this kind may be incomplete or temporary versions of papers—or part of continuing work. This should be kept in mind when references are given to publications of this kind.

**Contract Reports** are produced to report scientific work carried out under contract. Publications of this kind contain confidential matter and are reserved for the sponsors and the DCE. Therefore, Contract Reports are generally not available for public circulation.

*Lecture Notes* contain material produced by the lecturers at the DCE for educational purposes. This may be scientific notes, lecture books, example problems or manuals for laboratory work, or computer programs developed at the DCE.

**Theses** are monograms or collections of papers published to report the scientific work carried out at the DCE to obtain a degree as either PhD or Doctor of Technology. The thesis is publicly available after the defence of the degree.

*Latest News* is published to enable rapid communication of information about scientific work carried out at the DCE. This includes the status of research projects, developments in the laboratories, information about collaborative work and recent research results.

Published 2018 by Aalborg University Department of Civil Engineering Thomas Manns Vej 23, DK-9220 Aalborg Ø, Denmark Printed in Aalborg at Aalborg University

ISSN 1901-726X DCE Technical Report No. 237

### Contents

<u>1.</u>	Principle of Particle Image Velocimetry (PIV)	. 1
<u>1.</u>	Components of PIV	. 1
	2.1 Illumination system	. 2
	2.2 Image acquisition unit	. 3
	2.3 Seed generation	. 4
	2.4 Data acquisition/processing	. 6
	2.5 Accessories	. 7
	2.5.1 Traverse system	. 7
	2.5.2 Stereoscopic PIV calibration tools	. 8
<u>2.</u>	Hardware installation	. 8
	3.1 Laser system	. 9
	3.2 Light sheet optical, mirror arm and base	11
	3.3 CCD Camera	12
	3.4 Timer box/Synchronizer	13
	3.5 3-D traverse	13
<u>3.</u>	Measurement procedure	15
	4.1 Laser light sheet alignment	15
	4.2 Camera setup and calibration	16
	4.3 Data acquisition	18
	4.4 Data Processing	20
<u>4.</u>	Image evaluation method for PIV	22
	5.1 Cross-correlation	22
	5.2 Adaptive correlation	23
<u>5.</u>	Three component PIV measurement	24
	6.1 Hardware set-up	24
	<u>6.1.1 Light sheet set up</u>	24
	<u>6.1.2 Camera set up</u>	24
	6.1.3 Calibration target	26
	6.2 Camera calibration	27
<u>Re</u>	ference	29
Ap	pendix 1: Laser Specifications	31
<u>Ap</u>	pendix 2: CCD Camera Specifications	35

### 1. Principle of Particle Image Velocimetry (PIV)

Particle image velocimetry (PIV) is a non-intrusive, whole filed optical method providing instantaneous velocity information in fluids [1][2][3]. The flow is seeded with tracer particles. The particles is illuminated in the target area with a light sheet at least twice within a short time interval. The camera images the target area and capture each light pulse in separate image frames. The displacement of the particle between the light pulses can be used to determine the velocity vectors. The velocity is calculated according to the equation below:

$$\overline{V} = \frac{\Delta \overline{X}}{\Delta t}$$



Figure 1. Measurement principle of PIV [3]

The measurement area depends on several factors including laser power, seeding, camera sensitivity, as well as the flow velocity.

Laser power equipped with optic components generates a light sheet, which is typically pulsed to produce a stroboscopic effect. The laser and the camera are synchronized, so particles illuminated by the first light pulse are captured on image frame 1, and particles illuminated by the second light pulse are on frame 2.

In order to evaluate the PIV data, the image frame is divided into small subareas called 'Interrogation areas'(IA). By cross-correlating the interrogation area from each image frame (frame 1 and frame 2), it generates an average particle displacement vector. To repeat the correlation process in all interrogation area, we could obtain a vector map.

### 2. Components of PIV

Illumination:

• Laser

```
• Light Sheet Optics Image acquisition:
```

- Camera
- Lenses & Filters

Data acquisition/ processing:

- Synchronization
- Software: DynamicStudio

Seed generation:

- Seed generator
- Seeding material

### Accessories

- 3D PIV calibration tools 200\*200 mm and 450\*450 mm
- Scheimpflug Camera Mounts
- Traverse Systems and controller

### 2.1 Illumination system

The laser system is used as an illumination source for PIV. The laser system is double oscillator Q-switched Nd: YAG laser and produces infrared laser light at 1064 nm. Because the PIV camera is not sensitive to nearinfrared red light, the laser light is converted to visible green light (532nm) by a harmonic generator. The use of two independently laser oscillators allows the generation of double pulse outputs with inter-pulse separation time of less than 1 ns (nanosecond). Two laser outputs are combined by polarizers just before the harmonic generator (HGA), in order to be used with a single set of external optics. Each laser cavity is operated in single Q-switch mode. The delay between laser flash from cavity 1 and cavity 2 corresponds to the time between two images capturing particle positions. The principle of double oscillator Q-switched laser is illustrated in *Figure 2*.



Figure 2. Principle of double oscillator laser [4]

The laser system consists of a laser head, an integrated power supply and a manual remote control box, as shown in *Figure 3*. The laser head is the main component of the laser system, which is comprised of laser oscillators, the 1064 nm polarization beam combination optics and the 532 nm harmonic generation and separation optics. The integrated power supply is a self-contained unit containing the control, power and cooling units. Finally, the laser functionality is controlled via a manual remote control box.



Figure 3. PIV laser system [5]

The laser beam coming out from the laser system has an axisymmetric shape. In order to generate a planar light sheet, a light sheet optics needs to connect with a laser system. The main component of light sheet optics is cylindrical lens focuses the light sheet to a certain thickness and field angle [4][6], see *Figure 4*.



Figure 4. Light Sheet Optics [5]

### 2.2 Image acquisition unit

The function of the camera is to capture the position of seed particles in the flow field illuminated by the laser light sheet. The most common cameras for PIV system is Coupled Charged devices (CCD) and Complementary Metal Oxide devices (CMOS).

FlowSense EO 4M CCD camera is used in this PIV system, as indicated in *Figure 5***Error! Reference source not found.**. CCD is an electronic sensor that converts light into electric charge. CCD cameras comprise an array of detectors called pixels. The camera can record images with a maximum resolution of 2048\*2048 pixels, other technical parameters can refer Appendix 2. When the seed particles are small or the light intensity is low, the camera needs to have a high sensitivity to incoming light [4]. The sensitivity of CCD camera is evaluated by Quantum Efficiency (the percentage of photons hitting a photo-reactive device that produces charge carriers, measured in electrons per photon). FlowSense EO series camera could reach up to 56% QE.



Figure 5. FlowSense EO series CCD camera [5]



Figure 6. f-number of the CCD camera

The brightness of the picture is determined by an f-number, as indicated in *Figure 6***Error! Reference source not found.** f-number is a dimensionless number that is a quantitative measure of lens speed, which is the ratio of the system's focal length (f) to the diameter of the entrance pupil (D), as Equation below [7]. Ignoring differences in light transmission efficiency, a lens with a greater f-number projects darker image.

 $F - number = \frac{f}{p}$ 

### 2.3 Seed generation

The measurement principle of PIV system is to determine the particle velocity instead of direct measure the fluid velocity. Therefore, the seed particles have to be carefully selected in order to avoid significant discrepancies between fluid and particle movement. Proper selection of the seeding particle type depends on the nature of the investigated flow. The basic principle is that the particles must be small enough to track the flow accurately and big enough to scatter sufficient light to be captured by the camera. Seeding particles should be uniformly distributed in the flow with a sufficient, steady concentration, and coagulation and deposition of particles on the surfaces should be minimized so that the seeding intensity does not decrease [9]. The number of particles in the flow is critical in obtaining a good signal peak in the cross-correlation. As a rule of thumb, 10 to 25 particle images in each interrogation area are recommended.

The principle of selection seed particle includes[8]:

- Able to follow the flow
- Good light scatters
- Conveniently generated
- Non-toxic, non-corrosive and non-abrasive
- Non-volatile or slow to evaporate
- Chemically inactive

Typical seeding material for use in airflow and liquid flows can be found in Table 1 and Table 2.

#### Table 1. Typical seeding materials for use in airflow [2]

Material	Particle diameter (μm)	Comments
Al <sub>2</sub> O <sub>3</sub>	< 8	Generated by fluidization (Useful for seeding flames on account of a high melting point)
Glycerine	0.1 - 5	Generated by atomization
Silicone oil	1 - 3	Generated by atomization (very satisfactory results)
SiO <sub>2</sub> particles	1 - 5	(Spherical particles with a very narrow size distribution and better light scatter than TiO <sub>2</sub> )
TiO <sub>2</sub> power	from submicrometer to micrometer	(Good light scatter and stable in flames up to 2500 oC but very wide size distribution and lumped particle shapes)
Water	1 - 2	Generated by atomization (Evaporation is avoided by the addition of evaporation-inhibitor)
MgO		Generated by the combustion of magnesium powder (Gives a dirty unsteady supply of seeding)

#### Table 2. Typical seeding materials for use in liquid flows [2]

Material	Particle diameter (μm)	Comments
Aluminum powder	< 10	Preserves polarization by scattering
Bubbles	5 to 500	Can only be used when the two-phase flow is acceptable. The bubbles must be in the spherical Re-Eo regime and the terminal rising velocity must be negligible to the fluid velocity
Glass spheres	10 to 150	
Latex beads	0.5 to 90	Delivered with narrow size distribution but expensive
Milk	0.3 to 3	Cheap and efficient but not popular
Pine pollen	30 to 50	Excellent marker with regard to relative particle density (Egg-shaped and swell somewhat after some time in water

In the indoor environment measurement, PIV is mainly used to investigate indoor airflow. Haze machine (Stairville Hz-200 Compact Hazer DMX) is used in the PIV system to generate haze by evaporation and condensation of water-based haze liquid (Stairville PHF Pro Haze Fluid), see *Figure 7*. The haze is non-irritant and non-flammable. The mean particle size is around 1-5  $\mu$ m and the haze's durability can be controlled through the timer remote control. The limitation of the haze machine is that the generation tends to be unsteady and discontinuous due to the limit of heating capability.



Figure 7. Fog generator and seeding material [9]

### 2.4 Data acquisition/processing

DynamicStudio is the software platform used to process PIV data measured from different flows. It a multifunction package, which contains tools for configuration, acquisition, analysis, post-processing of acquired data [10].



Figure 8. DynamicStudio [5]

On the other hand, the software needs to cooperate with a synchronization unit, as indicated in *Figure 9*. The camera and the laser cavities need be synchronous to capture PIV images with a specified time difference.

![](_page_13_Picture_0.jpeg)

Figure 9. Synchronizer

![](_page_13_Figure_2.jpeg)

Figure 10. Typical trigger synchronization of the PIV measurement using a Two cavity laser [10]

### 2.5 Accessories

#### 2.5.1 Traverse system

Normally, the indoor airflow measurements require mapping of the fluid velocity in a large space. Therefore, the velocity information should be measured from many positions. Traverse system could help to precisely locate the camera or light sheet optics in three-dimensions, see *Figure 11*. If the light sheet optics and camera are mounted on a common traverse system, the distance between the cameras and the light sheet remains constant so that there is no need to calibrate the system again[11].

![](_page_13_Picture_7.jpeg)

Figure 11. Traverse Systems [5]

### 2.5.2 Stereoscopic PIV calibration tools

When using two cameras in a 3D PIV system, a stereoscopic calibration is required, by comparing the images of each camera against a calibration target. Plane calibration target consists of a one-sided or double-sided white image with black dots on a regular spaced grid that can be easily detected by the camera, as shown in *Figure 12*. Based on the different types of plane target, the user can choose to mount the camera either on the opposite sides of the calibration target or on the same side, as shown in *Figure 13*. Although stereoscopic PIV is possible using a non-symmetric location of the cameras, the most accurate calibration is achieved when the angle between the two cameras is 90 oC [11]. Detail description of the calibration procedure is presented in Chapter 6.

![](_page_14_Picture_2.jpeg)

Figure 12. Plane calibration target [5]

![](_page_14_Figure_4.jpeg)

Figure 13. Stereoscopic PIV calibration (a) Using a plane (one-sided) calibration target (b) Using a multi-level (double-sided) calibration target [11]

### 3. Hardware installation

The basic layout of a PIV system is illustrated in *Figure 14*. The following sections will describe the installation and connection of each component.

![](_page_15_Figure_0.jpeg)

Figure 14. Layout of PIV measurement

### 3.1 Laser system

The laser system is composed of a laser head, power supply unit and laser system control, as shown in *Figure 15*. The laser head should be placed on a secure optical table for mounting rig and fixed down using the mounting feet provided. The power supply unit should be located in the free space that allows the cooling air circulation. The laser head should be installed in a place that the light sheet can pass the measurement object.

![](_page_15_Picture_4.jpeg)

Figure 15. Laser system (a) Laser head (b) Power supply (c) Remote controller

The main connection panel of the laser system is shown in Figure 16 and Figure 17.

![](_page_16_Figure_0.jpeg)

Figure 16. Laser power supply front side (a) TTL controls and system indicators (b) With cable connection

![](_page_16_Picture_2.jpeg)

Figure 17. Laser power supply backside (a) Indicator of connection (b) With cable connection

If it is the first time operating the laser system, the cooling reservoir should be filled with deionized/distilled water. The amount of cooling water could be checked through the cooling water observation window. Power up the laser system and turn the PUMP ON. The water will be pumped around the system, and refill the reservoir to the top and start the pump again. Repeat until the water level no longer drop when the pump is running.

The laser system has three operation modes, based on whether the timing of the flashlamp and Q-switch trigger signals are controlled internally or controlled from external sources [12].

- 1. **Fully internal mode**: Both lamp & Q-switch set to internal. This mode is used for starting up the laser system and when undertaking any kind of diagnostics or fault detection.
- 2. **External lamp mode**: Lamp set to external and Q-switch set to internal. This mode allows the laser to be synchronized with or triggered by an external control. But allows the laser to trigger the Q-switch using the optimized Q-switch delay set at the factory.
- 3. **Fully external mode**: Both lamp & Q-switch set to external. This model is applied when the laser system is completely controlled by an external control system. This is the model used when Dynamicstudio takes control over the laser system and synchronize laser with the camera.

**Test the laser system**: Connect the relative cables, and try to operate the laser with local control (internal trigger). Here no synchronization is needed.

- a. Turn the general power switch on (power supply)
- b. Turn the key-switch on (power supply)
- c. Turn the system on (remote controller)
- d. Adjust the laser energy and repetition rate (remote controller)
- e. Check crystal and cooling displace panel, wait for the active temperature stabilized at 100 oC (because 532nm HGA is actively heated and thermally stabilized at ~100 oC)
- f. Turn the pump on (remote controller)
- g. Turn the laser on (remote controller)
- h. Open the shutter on (remote controller)
- i. Reverse the procedure to shut down the laser system. If another operation is under the plan, just turn off the shutter and the laser and let the system keep its temperature and be standby.

Notice:

- 1. Always wear safety goggles and avoid both direct and diffused laser light. It is possible that the laser beam may be visible even through goggle at high laser power
- 2. Please keep the laser power minimum when performing the test. If the laser is working fine, then you can gradually increase the laser power. An orange color paper could use to observe the laser beam when wearing a goggle.
- 3. Laser energy grows exponentially with the dial reading in the remote controller, please find the relation in Appendix 1.
- 4. Attenuator is optional. An attenuator allows the laser energy of both outputs to be controlled without changing the input laser energy. The energy output as a function of attenuator dial setting can be seen in Appendix 1.

![](_page_17_Picture_15.jpeg)

### 3.2 Light sheet optical, mirror arm and base

Figure 18. The installation of base, mirror and light sheet optics [13]

The Base consists of a base with beam adjustments and a safety cover. The base has two functions, one is to direct the laser beam from horizontal to the vertical direction. The other is to form a stable base for the light guide arm. The base needs to be aligned before mounting the guide arm. The alignment procedure is stated below:

- Mount the alignment tool on the top of the Base
- Turn the laser on and run one of the cavities at low energy (approximate 500)

• Check the laser beam whether on the center of the small knob of the alignment tool. If not, the four top screws can be loosened and the top plate with the cover can be moved until the beam is centered

![](_page_18_Picture_1.jpeg)

• Lock the 4 screws in this position and remove the alignment tool.

Figure 19. Alignment of the Base [13]

After the alignment of the Base, the light guide arm can be mounted. The light guides arm allows a flexible delivery of the laser beam. The light guides are articulated arms with 5 or 6 mirrors, and the mirrors are pre-aligned to keep the laser beam centered in the aperture regardless of movement of the light guide.

The light sheet optics converts the pulsing beam from an ND: YAG laser into a pulsing laser light sheet. The optics produce a light-sheet with fixed or adjustable thickness, enabling the user to generate light-sheets for almost any flow illumination application.

![](_page_18_Picture_6.jpeg)

3.3 CCD Camera

Figure 20. CCD camera and its connections

The camera has three connections: power, synchronization signal, and data output. The synchronization sign connects to timer box, see *Figure 20*. The data output connects to PC, and power connects to the power supply. After the camera is connected, power is on and the DynamicStudio will detect the camera automatically if it is open.

After DynamicStudio detects the camera, remove the cap of the lens, operate the camera with Free Run mode. Detail information regarding how to operate the camera is in Section 4.2. It is important to notice that always protect the camera from the direct illumination of laser light. This is the most common type of damage.

### 3.4 Timer box/Synchronizer

The timer box works together with DynamicStudio to synchronize the camera, the laser and the flow to be measured. The connection of the timer is shown in *Figure 21* and Figure 22.

![](_page_19_Figure_2.jpeg)

Figure 21. Connection of the timer with laser and camera [10]

![](_page_19_Figure_4.jpeg)

Figure 22. Synchronizer output channels connected with laser power and camera

If two cameras are used for 3D measurement, use a three-way connection to connect the two cameras and the time box, as shown in *Figure 23*Error! Reference source not found.

![](_page_19_Picture_7.jpeg)

Figure 23. Three way valve

#### 3.5 3-D traverse

The system contains X, Y, Z traverse, a traverse controller and an emergency stop box.

![](_page_20_Picture_0.jpeg)

Figure 24. 3-D traverse

![](_page_20_Picture_2.jpeg)

(a)

(b)

Figure 25. Traverse controller (a) front side (b) Backside- Rear panel

### Cable connection:

- The motor cables of the traverse connect to the rear panel of the controller, as shown in **Error!** Reference source not found.
- The emergency stop box cable is connected to the connector labeled 'Remote'.
- Connect the Null-modem cable to the connector labeled 'RS 232'.
- Connect the socket named 'Cover' in the connector labeled 'Cover'.

Table 3. Motor connection

Traverse unit	Controller output
No. 1	X-axis
No. 2	Y-axis
No. 3	Z-axis

#### **Operation of the traverse system:**

The traverse system can be controlled through the DynamicStudio installed in the PC.

- Traverse controller is connected to the PC using the serial interface cable
- Two emergency stops are released
- Check the key is in position and turn counter clockwise

- Turn on the main power switch on the rear side of the controller
- Turn on the power switch below the emergency stop on the front of the controller
- Now the green power push button, the green switch and the white indication light 'Cover' will lit and the controller is ready
- To control the traverse, go to the DynamicStudio interface menu Run->Traverse Control

Traverse Control			
Current position:	[0.00,	0.00, 0.00]	Read
X-position	7.00	mm	Mov
Y-position:	3.00	🔶 mm	Stop
Z-position:	25.00	🚔 mm	Rese
			Hom

Figure 26. Traverse control panel

### 4. Measurement procedure

In this section, you will use DynamicStudio:

- Start DynamicStudio
- Enter Acquisition mode press Run/Enter Acquisition Mode or click the little green button <a> on the toolbar</a>
- Cameras and synchronization devices are auto-detected and appear in the 'Devices' list. Note: In our system, DualPower laser will be controlled by the remote controller instead of software control. Therefore, the laser control is showed as 'Disable'.
- 3. In the 'Synchronization cables' panel, connect each device, as shown in *Figure 27*.

📲 Acquired Data 🖶 System Control	Synchronization Cables 🗸 🗸 🛪
Devices         Computer info         Acquisition Agent @localhost         Image Solution (Computer)         I	✓ ♣ X Selected: DualPower 200-15 ③ Timer Box ③ [Istart/Enable] In 2 ○ [Laser D-sub Pin 3]Out 1 ○ [Laser D-sub Pin 3]Out 3 ○ [Laser D-sub Pin 3]Out 4 ○ [Laser D-sub Pin 3]Out 4 ○ [Camera 1 trig] Out 7 ○ [General trig] Out 7 ○ [General trig] Out 8
<i>(a)</i>	(b)

Figure 27. (a) System control panel (b) Synchronization cables connection in DynamicStudio

### 4.1 Laser light sheet alignment

- Wear goggles that block the green light. Use a piece of orange paper to locate the position and the thickness of laser sheet.
- Switch the laser to 'internal mode' (both Lamp & Q-switch trigger set to Internal, detail description refer to Section 3.1 ) Turn off the rest of the system and cap the camera lens, to avoid damage by reflected light. Adjust the laser power to the minimum required for light sheet alignment ( approx. 500).
- Turn on the laser by following the procedure in Section 3.1
- Rotate the optics to generate the light sheet in the required plane of measurements and adjust the light sheet thickness by moving the lens focus, as indicated in *Figure 28*.

- Select a suitable height of light sheet based on the distance between sheet optics and the field of view and the size of the field of view.
- Minimize surface reflection light and check that none hits the camera lens.
- Switch the laser off and set back the laser to 'External mode'.

![](_page_22_Figure_3.jpeg)

Figure 28. Images of slightly misaligned light sheets [2]

Note: The main velocity component of flow should be parallel to the light sheet, in order to minimize systematic errors and out-of-plane loss of particles.

### 4.2 Camera setup and calibration

### Camera alignment:

- Switch off the laser or keep the laser in internal trigger mode
- Put the plane target in the measurement area.
- Enter the acquisition mode and set up the acquisition parameters in 'System control' panel. 'Single frame mode' should be selected, as shown in *Figure 29*.
- Long exposure time is required for the camera to capture enough illumination, since no laser illumination. The exposure time can be set in the Devices Properties panel, corresponding to the selected camera. A long exposure time, such as 10000 µs or longer is suggested.
- Click Free Run in System Control panel to start acquiring image
- Refine the position or the attitude of the camera as well as its focus
- You can use 'Online Focus Assist' to tune the focus of the camera (right click the 'Image Format' device and select 'Add Online Analysis', then select 'Online Focus Assist', detail refer to [10])

		🐚 Free Run
		( Preview
lime between pulses	145751.3 <sup>,</sup> μs	Acquire
Trigger rate	6.861 Hz	Stop
Number of images	100	Abort/Rese
Single Frame Mode	~	

Figure 29. Acquisition setup in System Control Panel

There are three different ways of acquiring images with DynamicStudio, corresponding to the three topmost buttons in the right-hand side of the system control window:

- **Free Run**: In free run, the camera is running freely and not synchronized with other hardware devices. The laser is not activated in this mode.
- **Preview**: In preview mode, all devices are synchronized, the laser is flashing and the camera is triggered to acquire images at the rate specified in the System Control panel. It will not stop acquiring images until you press Stop.
- **Acquire**: Acquire does exactly the same as Preview with the one exception that it stops when the requested number of images have been acquired.

#### Calibration of the camera:

The purpose of capture the calibration image is to provide dimensional information to the measurement field. The calibration procedure is based on following steps:

- After the camera is aligned, keep the 'Single Frame mode' and click the Free Run to acquire images
- Switch to 'Acquired Data' panel, as shown in *Figure 30*.
   If the acquired images are satisfied, click the 'Save for Calibration' button to save these images. It may require building a new project database. Only one calibration folder per project can be created.
- For the velocity measurement, the scale factor as to be determined, which give a proportional relation between real length in the physical world and how many pixels corresponding that length. Right-click the calibration image and select 'Measure sale factor', *Figure 31*, the input of scale factor refer to the manual of DynamicStudio [10].
- Right-click calibration image and select a proper calibration method, see *Figure 32*.

Acquired Data	<b>→</b> 쿠 ×
	Save in Database
Animation interval 500 ms	Save for Calibration
	Clear Buffers
HiSense Mk I 1	
🛃 System Control 📴 Acquired	I Data

Figure 30. Acquired data panel

![](_page_24_Figure_0.jpeg)

Figure 32. Select calibration method

### 4.3 Data acquisition

The data acquisition procedure is similar to that of the capture of the calibration image. But the following different steps should be awarded:

- Select ' Double Frame mode' in the System Control panel
- Adjust the 'Time between pulses'. The time between pulses should be long enough to determine the displacement of the particles between two pulses, also need to be short enough to avoid particles leaving out of the interrogation area. PIV Setup Assistant could help to calculate a suitable value of Δt based on provided information, see *Figure 33*.
- Check all the connections and verify the laser is prepared for illumination (connection is correct, the laser is pre-warmed, both flash lamp and Q-switch are set to 'External' trigger, the laser power is optimized, etc.)
- Specify the number of images to acquire and trigger rate

- Camera exposure time should be reduced, due to laser will be used for illumination. Start from the minimum exposure time 10-15 µs based on camera series.
- Start the 'Acquire mode'
- Click 'Save in Database' if the image quality is acceptable. The quality of image could be check by observing the cross-correlation map immediately. Right-click the acquired image, select 'Cross-Correlation Map', the cross-correlation map to each interrogation area can be observed (*Figure 34*).
- It is better to repeat each measurement several times to achieve accuracy results (for example repeat each measurement 5 times and use the average value)

![](_page_25_Figure_4.jpeg)

Figure 33. PIV Setup Assistant

![](_page_25_Figure_6.jpeg)

(a)

![](_page_25_Figure_7.jpeg)

![](_page_25_Figure_8.jpeg)

### 4.4 Data Processing

- After saving the acquired images, select 'Database' from 'View' on the top of DynamicStudio.
- Select the images would like to be processed, right-click one of them, select 'Analyze'. Then choose suitable analysis method in the 'Select Analysis Method' panel, see *Figure 35*. Detail description regarding analysis method refers to DynamicStudio manual [10].

Database	<del>~</del> ∓ ×		Select Analysis Method	_ 🗆
Deteted items     Deteted items     Project 2017-11.1     Project 2017-12.1     Project 2017-12.2     Project 2017-12.2     Project 2017-12.2     Project 2017-12.2     Detetetetetetetetetetetetetetetetete	8 09-1635 8 09-1635 8 09-1630 8 09-5433 8 130721 131124 enset0 4M #2 50 Images Multi Calibration enset1 #101 22 Solimanes Open Solima	Categories Categories Categories Categories Conversion Masking PIV Signal LIF Signal LIF Signal Rayteigh Signal Vector & Derivatives Plots Coordinates Statistics Particle Characterisation Volumetric Links Export All Relevant Methods Use Distributed Analysis	Methods Image Arithmetic Image Arithmetic Adaptive Piv Adaptive Piv Adaptive Correlation D 2D Least squares matching (LSM) Image Stitch Scalar Map Extract Image Balancing Image Balancing Image RMS Image RMS Image RMS Image RMS	Cancel
Record Properties	Toggle fixed user selection Find Export Delete Rename Duplicate Move			
	(a)		(b)	

Figure 35. Data processing (a) Entrance of image analyze mode (b) Window of select Analysis Method

- The correlation signal is strongly affected by the variation in image intensity. The non-uniform illumination of particle image intensity, due to light-sheet non-uniformities or pulse-to-pulse variation, or irregular particle shape, out-of-plane motion, etc., create noise in the correlation signal [1]. Therefore, pre-processing of particle image is often very necessary, Select the proper image process method, in the image processing library. Several commonly used functions are described below:
  - 'ROI Extract' is to extract interest region from the original acquired image. Therefore, time to processing the images will be shorter.
  - 'Image masking' is another method to remove areas of no interest from an acquired image.
  - 'Background subtraction' from the PIV recordings reduces the background noise. The background image can either be recorded in the absence of seeding, or through 'Image mean' to calculate the average intensity of corresponding pixels in all the selected images. A minimum selection of two images is required. Then the background image could be removed using 'Image Arithmetic', as shown in *Figure 36*.

Recipe- <image arithmetic=""/>		
Perform arithmetic on im or divide	age maps like subtract, add	, multiply,
Operand: I <u>m</u> age map		OK
🔘 Not in use		Cancel
⊙ Subtract ○ Add ○ Multi	iply by 🔘 Divide by	Apply
another image map record from		Defaults
Pixel mean		Deraults
		D <u>i</u> splay
Operand: <u>C</u> onstant		
🔘 Subtract 💿 Add 🔵 Multi	iply by 🔘 Divide by	
Constant <u>v</u> alue: 8		
Mean pixel value: 0		
Data clamping:		
Enable upper clamp	Enable lower clam	o
Upper clamp limit: 153	Lower clamp limit:	102
		-

Figure 36. Background subtraction

- After pre-processing image, the image evaluation method need be applied to convert pairs of
  particle images into velocity field. Select the calibration results, and then select the images to be
  analyzed by right click the image and select 'Analyze' option. Select the proper image evaluation
  method, in the PIV Signal library. Note: Read and study the instruction of each process algorithm
  carefully. The most suitable analysis method may be different depending on the measurement. It is
  recommended to try different PIV process method or different parameters to compare the results
  and understand the influence of the algorithm on the results.
- After PIV process, a vector map will be obtained. DynamicStudio offers various post-process algorithms, including various plot, statistics analysis and many additionally calculations. For example: 'Vector statistics' method calculates statistics from multiple velocity vector maps. Graphically results are presented as a vector map of mean velocity vectors. *Figure 37* illustrates an example of PIV measurement on the air jet from an active chilled beam terminal. It indicates the difference between the velocity map from a single image and multiple images.

![](_page_27_Picture_4.jpeg)

![](_page_28_Figure_0.jpeg)

Figure 37. PIV measurement of air jet from an active chilled beam terminal (a) Acquired particle image (b) Instantaneous velocity vector field (single image) (c) Averaged velocity vector field (200 images) [14]

### 5. Image evaluation method for PIV

### The statistical PIV evaluation will be used to calculate the velocity field from pairs of particle images.

### 5.1 Cross-correlation

![](_page_28_Figure_5.jpeg)

Figure 38. The cross-correlation method [1]

Two sequential images describing the spatial positions of particles are recorded at time t and time  $t+\Delta t$ . The velocity field is not directly calculated on the whole images but on the small subareas called interrogation areas (IA). Within each interrogation area, an average displacement of particles is determined from one sample to its pair in the second image. The displacement is directly related to the flow and the time

between two images and it can be calculated by the statistical algorithm of cross-correlation. High crosscorrelation values are observed where many particles match up with their corresponding partners. Therefore, the position of the peak corresponds to the average particles displacement in the IA.

The direct calculation of cross-correlation is very time-consuming and expensive to apply due to a large number of particles to be analyzed. Fast Fourier Transform (FFT) is a more efficient way to calculate cross-correlation which reduces the computation from  $O[N^4]$  operations to  $O[N^2 \log^2 N]$  operations [1] [4]. The most common FFT implementation requires the input data to have a base-2 dimension (i.e.  $32 \times 32$  pixel or  $64 \times 64$  pixel samples). FFT also assumes the sampled regions to be periodic in space. The consequence of the mathematical simplification of FFT is a dramatical increase of the noise along the edges of the IA. This is compensated by applying window or filter functions to the PIV calculations.

### 5.2 Adaptive correlation

The adaptive correlation method iteratively calculates velocity vectors with an initial interrogation area (IA) of the size N time the size of the final IA and uses the intermediary results as information for the next IA of smaller size, until the final IA size is reached [10]. As indicated in *Figure 39*, if the number of refinement steps N=3 and the final interrogation area 16\*16, the initial IA size is 128\*128. Overlap defines a relative overlap among neighboring IA. *Figure 40* illustrates the overlap of 50% in both horizontal and vertical directions. In this case, 5 vectors maps are created instead of 1 when overlap rate is 0%.

Based on the literature review [15], the final IA size is typically set to be 32\*32 pixels or 64\*64 pixels with overlaps of 50% or 25% for indoor airflow PIV applications. The adaptive correlation method can achieve higher accuracy supplemented with high sub-pixel accuracy and adaptive deforming window algorithm.

![](_page_29_Figure_5.jpeg)

Figure 39. Adaptive correlation example

![](_page_29_Figure_7.jpeg)

Figure 40. 50% Overlap with neighbouring IA

### 6. Three component PIV measurement

3D stereo PIV measurements are based on the same fundamental principles as human eyesight. A stereo PIV system measures particles displacements using two CCD cameras, as illustrated in Figure 41. Each of the camera plays the role of the human eye, looking at the flow field from different angles. The DynamicStudio software plays the role of the brain, relating the observed 2\*2D displacements into a 3D displacement.

![](_page_30_Figure_2.jpeg)

Figure 41. Principle of 3D stereo PIV measurement [16]

### 6.1 Hardware set-up

Setting up the hardware in 3D PIV system (calibration target, light sheet and stereo cameras) is different from that in 2D.

### 6.1.1 Light sheet set up

It is recommended to increase the laser sheet thickness to approximately twice the size of the interrogation area projected out in object space (the factor 2 is necessary to compensate for the Gaussian distribution of the light intensity). For example, an interrogation area of 32\*32 pixels, a pixel pitch of 7.4 µm and a magnification factor of 0.1, the required laser sheet thickness is around:

$$(2 \times 32 \times 7.4)/0.1 = 4.74 mm$$

To adjust the thickness of the laser sheet, rotate the thickness adjust pin located in the middle part of the light sheet optics.

### 6.1.2 Camera set up

Mathematically, the most accurate measurement of particles displacement is obtained when the angle between the two cameras is set to 90°. However, experience indicates that excellent 3D stereo PIV measurements can also be conducted with camera viewing angle of  $\pm 30^{\circ}$  or even  $\pm 15^{\circ}$ .

The 3D PIV set up requires the optical arrangement to fulfill the Scheimpflug condition: the object, image and lens planes have to cross each other on the same line. In order to fulfill this condition, the camera has to be tilted with respect to the lens as illustrated in *Figure 42*. The Scheimpflug condition can be calculated based on the equation below:

$$\alpha = Arc \tan[(f_{lens} - \tan \theta) / (d_0 - f_{lens})]$$

Where:  $f_{lens}$  is the lens focus length  $\vartheta$  is the viewing factor  $d_o$  is the distance between the centre of the lens and the centre of the calibration target

![](_page_31_Figure_0.jpeg)

Figure 42. Scheimplug condition camera plane ( $\alpha$  is Scheimpflug angle,  $\vartheta$  is viewing angle) [16]

Another way of finding the Scheimpflug condition is to focus at the centre of your image and then tilt the camera to achieve best possible focus over the entire image. Online Focus Assist makes the alignment of a stereo system easier and faster, see Figure 43. Detail description of Online Focus Assist refers to DynamicStudio manual [10].

![](_page_31_Picture_3.jpeg)

![](_page_31_Picture_4.jpeg)

(a)

![](_page_32_Figure_0.jpeg)

Figure 43. Using Online Focus Assist to set up a stereo PIV system [10]

### 6.1.3 Calibration target

Before conducting calibration, it is necessary to define how large the flow field of interest is and select appropriate calibration target. The standard calibration target is 200 mm\*200 mm. If the flow field area is larger, a larger calibration target is required. If the flow field area is smaller than 50 mm\*50 mm, the number of dots will be too small. A target with a smaller dot pitch is needed. In order to achieve best calibration, each calibration image has to have at least 100 visible dots.

Align the calibration target with the light sheet and install it in the centre of the flow field. Alignment tools could be applied to align the light sheet with the calibration target. The tool includes three small units with hole allowing laser light to pass through. The center of the holes are exactly 5 mm from the front of the calibration target, so during alignment the target should be traversed 5 mm away from the position where calibration images are acquired.

![](_page_33_Figure_0.jpeg)

Figure 44. Calibration target with zero marker, axis markers and alignment tools [16]

### 6.2 Camera calibration

- Click \star to get acquisition mode
- Acquiring images for calibration: Select the 'Single Frame mode' and press 'Free Run' to collect images
- Select 'Acquired Date' tab and click on 'Save for Calibration'
- Select single calibration image or multiple calibration images from both cameras in the database tree. They must be selected as fixed inputs (use left click + spacebar), as shown in *Figure 45*. Once calibration image ensembles have been selected, right click and select 'Calibration', select the method 'Multi Camera Calibration'

Euliresolution	Sence 4M MkI	#1 7 images	
Flow	iense 4M MkI Sense 4M Mk <sup>II</sup>	#4 7 images	
Flows	iense 4M Mi iense 4M Mi	<b>Open</b> Open as Numeric Show Contents List	Ctrl+Shift+Enter
Elows	Sense 4M Mk	Delete contents	
🗄 🔤 Flows	iense 4M Mi	Measure Scale Factor.	
🗎 🌋 Run 16:53:0	8	Calibrate	
	6	Pre-process	
Record Properties		Custom Properties	
		Unselect All	Ctrl+U
Ensemble info		Find	
Dataset type	Image Imag	Sort	
Number of datasets	7	Split	
File name (first file)	data∖image	Export	•
Remote datasets	no		
General		Delete	Del
Name	FlowSense	Rename	F2
Path	N:\DS Data	Duplicate	
Path length	95	Move	

Figure 45. Select calibration images from both camera as fixed inputs

• Target information needs to be provided before starting the calibration. If using default Calibration plate, select 'Use Standard Target' and 'Dots, 200\*200 mm' or the other default target, where the parameters of the grid and the markers are locked. If the default calibration target is not suitable for your measurement, you could define a new one. Select 'Tool'- 'Edit Calibration Targets'-'Target manager', see *Figure 47*.

rget Info Calibration Model	ſ	Flow	Sancal	IM MET	0 F	lowSen	se4M N	AkIL1	Flows	Sense4N	A MkILE	3	help p
		110%	Jense4	nvi_tviku.	0	owsen	JC4NI_I		11011-	Jensein			ОК
Automatic	~	0	0	0		0				-	-	-	Cance
									U		ల	0	400
Standard Target Types		0	0	0	0	0	0	0	0	0	-	-	App
Dots 200x200mm													Defau
5003, 200x200mm		0	0	0	0	0	0	0	0		0	-	Displa
Marker Shape:											•	•	
Dots	×	•	0	0	0	•	0	0	0	0	0		
Marker info													
Size Of Axis Maker 1,3		0	0	0	0		0	0	0	0	0	•	
Size Of Reference   5		-								-	-		
Size Of Normal Ma 2		•	•	0	0	0	0	0	0	0	0	•	
Target info							1			-	•	•	
Grid spacing [mm] {5 ; 5}		•	0	0	0	0		-0	0	0	-	~	
Reference Point [n {0 ; 0}									-		ø		
Marker Color BlackMarks		0	0	0	0	0	0	0	0	•	-		
								-	•	•	9	•	
			0	0	0	0	0	0	•	~	-		
						-	-	•	•		0	0	
			0	0	0	0	0	•		-		-	
						-	-	•	•		0	•	
Size OT Axis Maker [mm]	10		0	0	-	-	-	-	-	-	-	200	

Figure 46. Multi Camera Calibration window

Target Manage	er	
argets:		
Dots, 100x100mm	^	New
Dots, 200x200mm		
Dots, 270x200mm		Edit
Dots, 450x450mm		Editori
Multi level, 270x190mm, 2nd level +4		Delete
Multi level, 270x190mm, 2nd level -4		Delete
Multi level, 95x75mm, 2nd level +2		
Multi level, 95x75mm, 2nd level -2		
Checkerboard A7, 9x9 6mm squares		
Checkerboard A6, 9x9 8mm squares		
Checkerboard A5, 9x9 11mm squares		
Checkerboard A4, 9x9 15mm squares		-
Checkerboard A4, 9x9 20mm squares	×	Close

Figure 47. Define a new calibration target- Target Manager

- Specify the coordinate system used through 'Calibration Model'
- Finally press 'Apply' or 'OK' to calculate the calibration
- An example of calibration result is shown in *Figure 48*.

		ibration	- 🗆 🗡		
#	1	2	3	4	,
1	Average reprojection error (pixels)				
2	1.00180E-001				
3					
4	Camera matrix				
5	9.05840E+003	0.00000E+000	1.02385E+003		
6	0.00000E+000	9.06231E+003	1.03303E+003		
7	0.00000E+000	0.00000E+000	1.00000E+000		
8					
9	Lens distortion coeff. (K1,K2,P1 and P2)				
10	5.30762E-002	-3.63263E-001	3.80432E-004	6.91831E-004	
11					
12	Reference frame				
13	view: 0	ID: 53739lq8.0			
14	Reference rotation vector				
15	-3.07747E+000	-2.07799E-002	-5.90886E-001		
16	Reference translation vector				
17	2.40332E-001	-1.02461E+000	5.20667E+002		
18					
19	Rotation vectors (per view)				
20	-3.07747E+000	-2.07799E-002	-5.90886E-001	view: 0	
21	-3.07747E+000	-2.07700E-002	-5.90854E-001	view: 1	
22	-3.07746E+000	-2.07852E-002	-5.90876E-001	view: 2	
23	-3.07749E+000	-2.07691E-002	-5.90869E-001	view: 3	
24	-3.07751E+000	-2.07653E-002	-5.90838E-001	view: 4	
25	-3.07759E+000	-2.07483E-002	-5.90831E-001	view: 5	
26	-3.07749E+000	-2.07718E-002	-5.90833E-001	view: 6	
27	-3.07749E+000	-2.07632E-002	-5.90871E-001	view: 7	
28	-3.07748E+000	-2.07877E-002	-5.90884E-001	view: 8	
29	-3.07747E+000	-2.07704E-002	-5.90862E-001	view: 9	
30	-3.07751E+000	-2.07761E-002	-5.90850E-001	view: 10	
31	-3.07755E+000	-2.07586E-002	-5.90848E-001	view: 11	
32	-3.07755E+000	-2.07515E-002	-5.90821E-001	view: 12	
33	-3.07752E+000	-2.07659E-002	-5.90834E-001	view: 13	
34	-3.07749E+000	-2.07750E-002	-5.90854E-001	view: 14	
35	-3.07747E+000	-2.07723E-002	-5.90892E-001	view: 15	
36	-3.07746E+000	-2.07777E-002	-5.90870E-001	view: 16	
37	-3.07749E+000	-2.07787E-002	-5.90872E-001	view: 17	
38	-3.07751E+000	-2.07585E-002	-5.90847E-001	view: 18	
39	-3.07754E+000	-2.07501E-002	-5.90826E-001	view: 19	
10	-3.07749E+000	-2.07622E-002	-5.90849E-001	view: 20	
41	-3.07745E+000	-2.07655E-002	-5.90854E-001	view: 21	
42	-3.07748E+000	-2.07721E-002	-5.90852E-001	view: 22	
43	-3.07747E+000	-2.07842E-002	-5.90905E-001	view: 23	
11	-3.07748E+000	-2.07688E-002	-5.90858E-001	view: 24	
45	-3.07753E+000	-2.07646E-002	-5.90833E-001	view: 25	
46	-3.07754E+000	-2.07442E-002	-5.90783E-001	view: 26	
47	3 07747 -000	3 070005 003	F 00010F 001		

Figure 48. Example of multi calibration results

### Reference

- [1] J. Raffel, M., Willert, C.E., Wereley, S., Kompenhans, *Particle Image Velocimetry A Practical Guide*. 1998.
- [2] D. D. A/S, "2D PIV reference manual." .
- [3] D. Dynamics, "Particle Image Velocimetry Measurement Principles," 2017. [Online]. Available: https://www.dantecdynamics.com/measurement-principles-of-piv.
- [4] T. Olle, "Introduction course in particle image velocimetry," *Architecture*, pp. 1–8, 2004.
- [5] D. D. A/S, "Particle Image Velocimetry (PIV) Measurement Systems," 2017. [Online]. Available: https://www.dantecdynamics.com/particle-image-velocimetry.
- [6] X. Cao, J. Liu, and N. Jiang, "An overview of the applications of particle image velocimetry for indoor

airflow field measurement," Lect. Notes Electr. Eng., vol. 263 LNEE, no. VOL. 3, pp. 223-231, 2014.

- [7] F. Wikipedia, "f-number Wikipedia." [Online]. Available: https://en.wikipedia.org/wiki/F-number. [Accessed: 14-May-2017].
- [8] A. M. and J. H. W. R. Durst, *Principles and practice of laser-Doppler anemometry*, 2nd ed. Academic Press Inc, 1981.
- [9] "Stairville HZ-200 COMPACT HAZER DM BUNDLE Skylark," 2018. .
- [10] "DynamicStudio Manual.pdf.".
- [11] S. A. Jones, Advanced Methods for Pratical Applications in Fluid Mechanics. InTech, 2012.
- [12] "Laser system user manual.pdf.".
- [13] D. D. A/S, "Mirror arm and base for Pulsed lasers- Installation & User's guide," 2003.
- [14] S. V. B. Kozlowski, "Active chilled beams Air distribution and efficiency," Aalborg University, 2017.
- [15] X. Cao, J. Liu, N. Jiang, and Q. Chen, "Particle image velocimetry measurement of indoor airflow field : A review of the technologies and applications," *Energy Build.*, vol. 69, pp. 367–380, 2014.
- [16] D. D. A/S, 3D Stereoscopic PIV Reference Manual.pdf. 2006.

# Appendix 1: Laser Specifications

Laser order number	4784				
Laser model number		NANO L 200-15 PIV			
Laser serial number				LM	2180
Input electrical specifications			90-250	/AC at 50/6	0Hz 16A
Water supply specifications				N/A	
Repetition rate			<ul> <li>(*)</li> </ul>	15	Hz
Wavelength (nm)	1064	532	355	266	213
Output (mJ)		200			
Laser oscillator (Optics a	re the sa	me type	in each	laser)	
Laser rods				1/4"	x 76.5
Flashlamp				FX	(35
Filter			1	F	27
Output coupler			I	M9 3	30%
Rear mirror			[	M1 1	00%
Pockels cell			[	PC9-20/	R#2060
Laser amplifier			L	PC9-204	AR#2061
Laser rod			[	N	/A
Flashlamp			[	N/	/A
Filter			[	N/	/A

Harmonic generation

	Wavelength (nm)	Crystal	Dichroic Mirror
Doubler	532	XD71	M207
Tripler	355		
Quadrupler	266	-	-
Quintupler	213	-	-

### Laser 1 oscillator output energy and condition

Mode MULTI	-MODE	Output	Q-SW	ITCHED	Seeded	NO
Beam diameter	1/4"	Intra-cav	ity telesco	pe magnifi	cation	X
Repetition Rate	e (Hz)	15				
Lens Separation	(mm)	Х				
Laser Energy Dial	ial ~Output energy (mJ) Oscillator after mixing optics					
Setting	1064nm	532nm	355nm	266nm	213nm	1
1000	293	217				1
950	273	199				1

900	252	176			
800	198	125			
700	154	77			
600	99	35			
500	43	5			
-	-	-	-	~	-
Threshold	na	445			

Polarisation	HORIZ	HORIZ		
Pulsewidths at specified energy (ns)	~10	~8		

Optimum Q-Switch Delay

160 µs

Attenuator Fitted

MOTORISED

### Laser 2 oscillator output energy and condition

Mode	MULT	I-MODE	Output [	Q-SWITCHED	Seeded	NO
Beam dia	meter	1/4"	Intra-cavi	ty telescope magni	fication	Х
Repetition	n Rate (Hz)		15			
Lens Sepa	ration (mm	)	X			

Laser Energy Dial	~Output energy (mJ) Oscillator after mixing optics					
Setting	1064nm	532nm	355nm	266nm	213nm	
1000	292	217				
950	271	197				
900	249	177				
800	202	130				
700	155	85				
600	105	44				
500	63	16				
-	-	-	-	-	-	
Threshold	250	345				

Polarisation	VERT	HORIZ	
Pulsewidths at specified energy (ns)	~10	~8	

Beam combination

Laser 2 polarisation rotator	HWP1
Beam combining polarisers	P01 x 2
Optimum Q-Switch Delay	170 μs
Attenuator Fitted	MOTORISED

Note: Every time re-install the system, remember to manually adjust Q-switch delay times for both cavities, as illustrated in Figure below.

Device Properties 🗾 👻 🗜				
<mark>8∎</mark> 2↓ 🖻				
Max trigger frequency	15 Hz			
Flash 1 trigger pulse width	10 µs			
Flash 2 trigger pulse width	10 µs			
Q-Switch 1 trigger pulse width	10 µs			
Q-Switch 2 trigger pulse width	10 µs			
Flash 1 trigger polarity	Positive			
Flash 2 trigger polarity	Positive			
Flash 1 to Q-Switch 1 delay	160 µs			
Flash 2 to Q-Switch 2 delay	170 µs			
Q-Switch 1 activation delay	0.420 µs			

### Final Outputs For Laser 1 & Laser 2 With Varying Pockels Cell Delay. Energy set to 1000.

![](_page_40_Figure_1.jpeg)

Please note the delays shown are measured between the LAMP SYNC and the Output pulse with the Q-Switch triggered through the Direct Access. The outputs shown are for the individual wavelength only.

![](_page_40_Figure_3.jpeg)

# Appendix 2: CCD Camera Specifications

Model	fps at full resolution	Sensor resolution	Interframe time	Pixel size	Peak QE	Lens Mount Size
FlowSense EO VGA	260	640 px x 480 px	200 ns	7.4 µm	54%	C-mount 45 x 45 x 35 mm3
FlowSense EO 2M	44	1600 px x 1200 px	200 ns	7.4 µm	57%	C-mount 45 x 45 x 35 mm3
FlowSense EO 4M	20.4	2048 рх х 2048 рх	200 ns	7.4 µm	56%	C-mount 60 x 60 x 38 mm3
FlowSense EO 5M	16	2456 рх х 2058 рх	150 ns	3.45 µm	N/A	C-mount 45 x 45 x 39 mm3
FlowSense EO 11M	6.5	4008 px x 2672 px	300 ns	9 µm	50%	F-mount 60 x 60 x 38 mm3
FlowSense EO 16M	4.2	4872 px x 3248 px	300 ns	7.4 µm	47%	F-mount 60 x 60 x 38 mm3
FlowSense EO 29M	2.5	6576 px x 4384 px	300 ns	5.5 µm	47%	F-mount 60 x 60 x 45 mm3

ISSN 1901-726X DCE Technical Report No. 237